

Universal Gas Valve Actuator Kit (part number GVK) Revised 7/08

Gas valve with GVK gas valve kit installed as release to close.

Parts list:


___ box and covers	___ lockwasher
___ label	___ jam nut
___ hole plug	___ cover screws

Not used: trip lever and cotter

1/2" connector, purchase separately
(use part number 2105 or 2232)

Plug unused hole

Box & covers

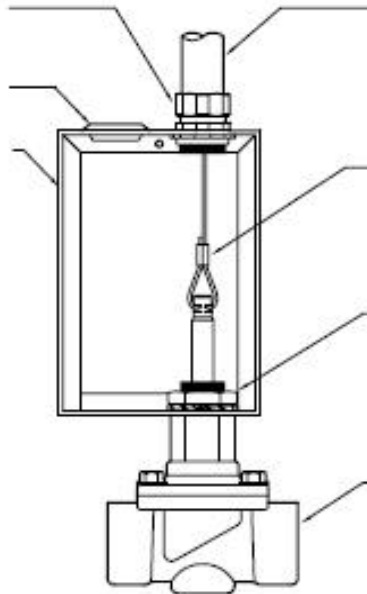

1/2" EMT conduit
(not included)

Cable and crimp
(see catalog)
purchase separately

Jam nut and
lockwasher

GVA gas valve
(GVA75 shown)
purchase separately


Installation:

1. Assemble parts as shown in the diagram above.
2. Insert end of cable through the cable crimp, the hole in the shaft of the gas valve and back through the cable crimp, leaving 1/8 inch or less cable emerging from the crimp. Compress the cable crimp securely. Trim cable if necessary.
3. Test the actuation of the gas valve and reset gas valve in the open position.
4. Place label on front cover and replace covers on box.

Gas valve with GVK gas valve kit installed as trip to close.

Parts list:

- | | |
|--------------------|------------------|
| ___ box and covers | ___ trip lever |
| ___ lockwasher | ___ jam nut |
| ___ cotter | ___ label |
| ___ hole plug | ___ cover screws |

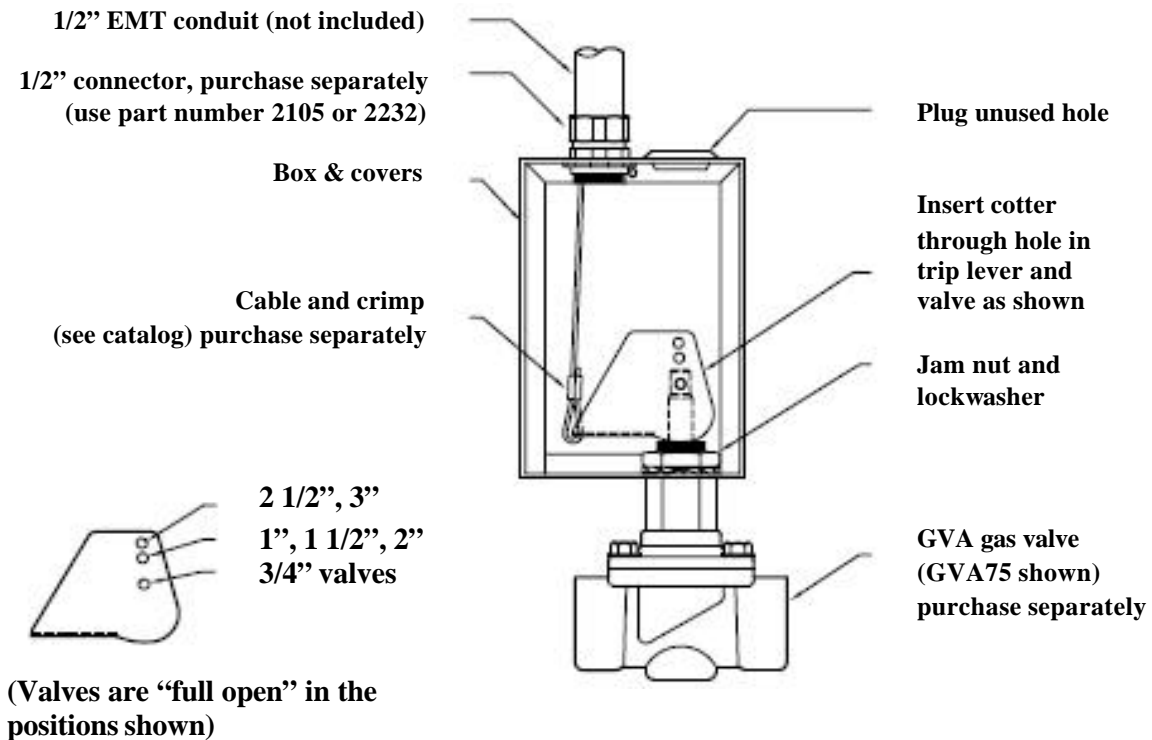

Installation:

1. Assemble parts as shown in the diagram above.
2. Install the cotter through the hole in the trip lever corresponding to the size valve installed. Bend both ends of the cotter over and check to insure that the lever operates freely.
3. Insert end of cable through the cable crimp, the hole in the edge of the trip lever and back through the cable crimp, leaving 1/8 inch or less cable emerging from the crimp. Compress the cable crimp securely. Trim cable if necessary.
4. Check for free operation of the trip lever.
5. Test the actuation of the gas valve and reset gas valve in the open position.
6. Place label on front cover and replace covers on box.