

INSTRUCTIONS



Manual Reset Relay Part # SRR




Brooks Equipment
P.O. Box 481888 • Charlotte, NC 28269
1.800.826.3473 • 1.800.433.9265

NOTE 1– Control switch must be closed before the reset switch can be pressed.

NOTE 2– To test, apply 120VAC to terminals 2 and 5. Then jumper 3 and 4. Push the reset and relay should operate. Remove jumper and relay will drop out.

All external wiring must conform to local electrical code.

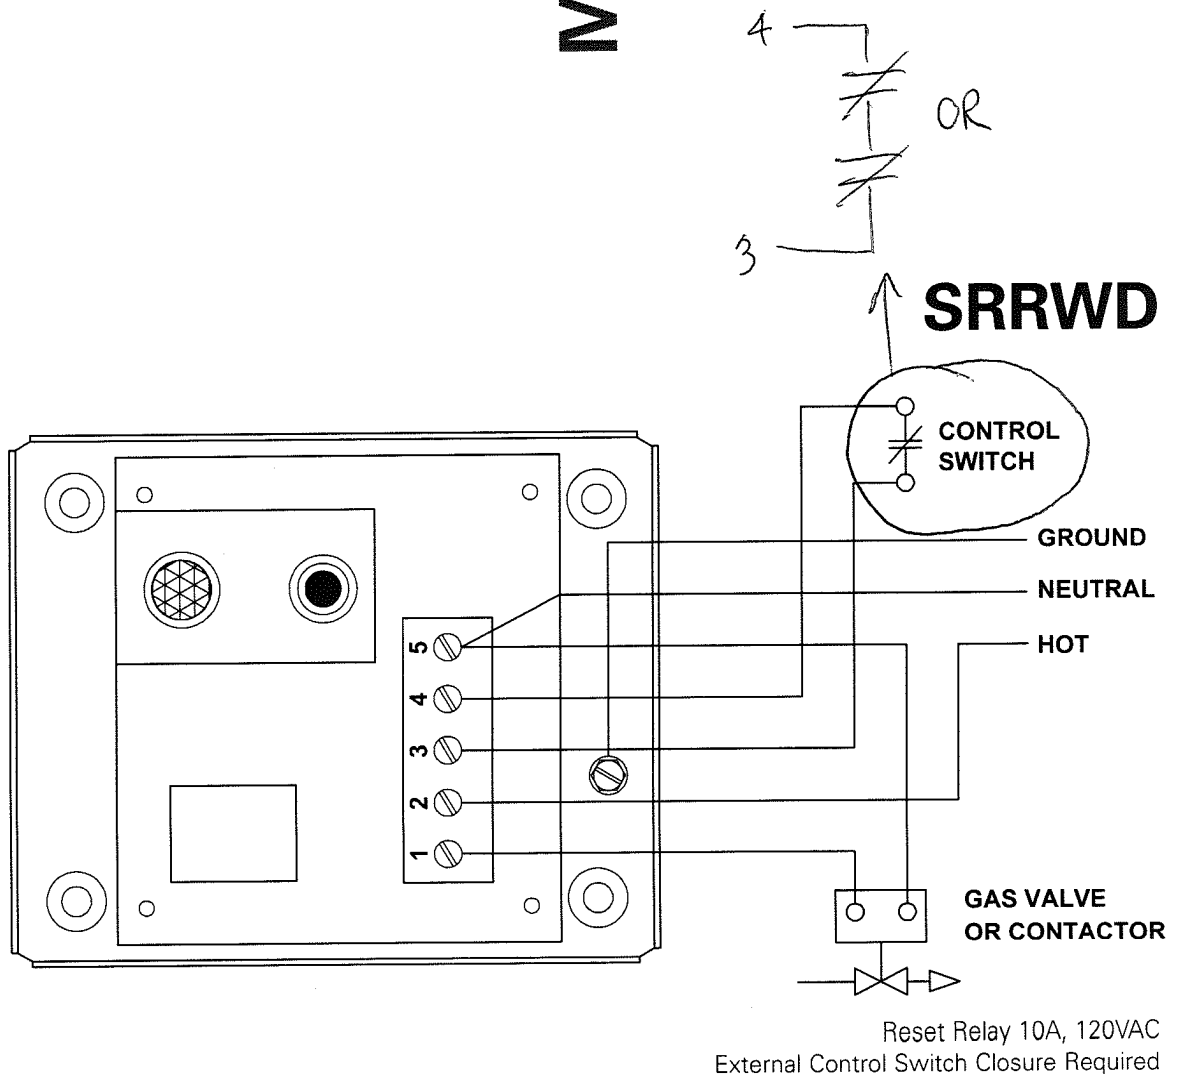

P.O. Box 481888 • Charlotte, NC 28269
1.800.826.3473 • 1.800.433.9265